


SPIRAL CABLE SUB-ASSY REPLACEMENT

60091-03


HINT:

COMPONENTS: See page 60-13

1. **PRECAUTION**(See page 60-1)
 2. **DISCONNECT BATTERY NEGATIVE TERMINAL**(See page 60-1)
 3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
 4. **REMOVE STEERING WHEEL COVER LOWER NO.2**
 5. **REMOVE STEERING WHEEL COVER LOWER NO.3**
 6. **REMOVE HORN BUTTON ASSY**(See page 60-14)
 7. **REMOVE STEERING WHEEL ASSY**(See page 50-8)
- SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)

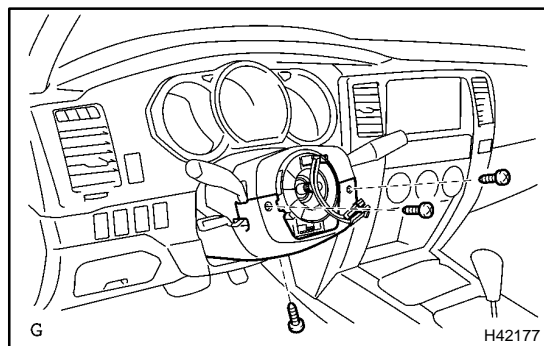

8. **REMOVE STEERING COLUMN COVER LWR**
 - (a) Remove the 3 screws and steering column cover LWR.
9. **REMOVE STEERING COLUMN COVER UPR**
 - (a) Remove the steering column cover UPR.

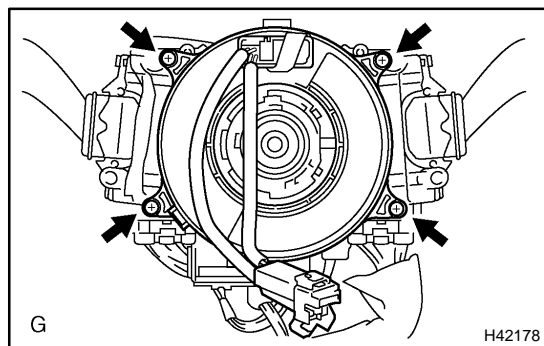

10. **REMOVE SPIRAL CABLE SUB-ASSY**
 - (a) Disconnect the airbag connector and connector from the spiral cable sub-assy.
 - (b) Remove the 4 screws and spiral cable sub-assy.

11. **INSPECT SPIRAL CABLE SUB-ASSY**(See page 60-8)
 - (a) If the following condition is identified, replace the spiral cable sub-assy with new one.
Condition:
Scratches or cracks on the connector
Cracks, dents or chipping of the spiral cable sub-assy
12. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
 - (a) Check that the front wheels are facing straight ahead.

13. INSTALL SPIRAL CABLE SUB-ASSY

- (a) Set the turn signal switch in neutral position.

NOTICE:

Make sure of the neutral position since the pin of the turn signal switch may be snapped.

- (b) Install the spiral cable sub-assy with the 4 screws.

NOTICE:

When replacing the spiral cable sub-assy with new one, remove the lock pin before installing the handle.


- (c) Connect the airbag connector and connector.
 (d) Install the steering column cover with the 3 screws.

14. CENTER SPIRAL CABLE


- (a) Check that the ignition switch is OFF.
 (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

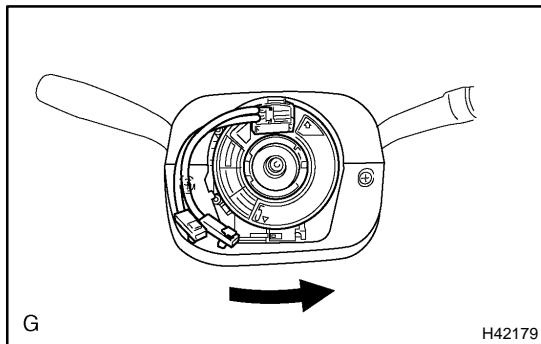

- (c) Turn the cable counterclockwise by hand until it becomes harder to turn.

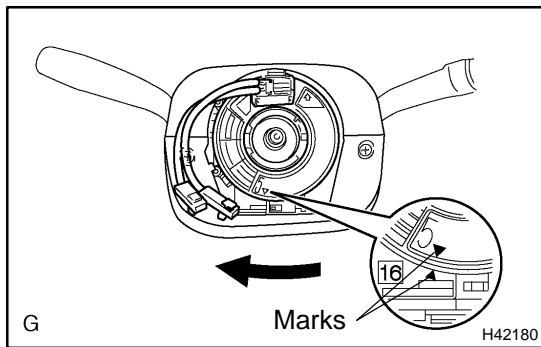

- (d) Then rotate the cable clockwise about 2.5 turns to align the marks.

HINT:

The cable will rotate about 2.5 turns to both left and right of the center.

15. INSTALL STEERING WHEEL ASSY(See page 50-8)**16. INSTALL HORN BUTTON ASSY(See page 60-14)****17. INSPECT HORN BUTTON ASSY(See page 60-8)****18. INSPECT SRS WARNING LIGHT(See page 05-614)**