


INSPECTION

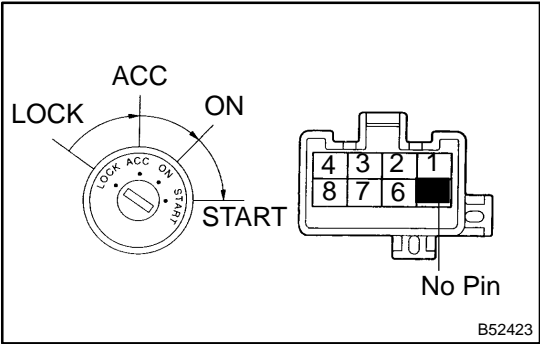

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the switch continuity.

Standard:

Terminal No	Switch Position	Specified Condition
-	LOCK	No continuity
2 ⇄ 3	ACC	Continuity
2 ⇄ 3 ⇄ 4 6 ⇄ 7	ON	Continuity
1 ⇄ 2 ⇄ 4 6 ⇄ 7 ⇄ 8	START	Continuity

If the result is not as specified, replace the switch assy.