


IGNITION OR STARTER SWITCH ASSY REPLACEMENT

8003R-01

HINT:

The installation is in the reverse order of the removal. However when there is a special point concerning the installation, it is indicated.

1. **REMOVE STEERING COLUMN COVER LWR (See page 50-8)**
2. **REMOVE STEERING COLUMN COVER UPR (See page 50-8)**

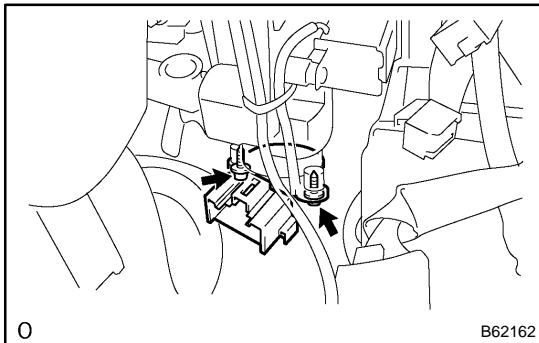

3. **REMOVE IGNITION OR STARTER SWITCH ASSY**
 - (a) Disconnect the ignition switch connector and un-lock warning switch connector.
 - (b) Remove the clamp.
 - (c) Remove the 2 screws and ignition switch.