


REAR WIPER MOTOR ASSY REPLACEMENT

6609C-01

1. REMOVE BACK DOOR TRIM BOARD(See page 75-39)
2. REMOVE BACK DOOR SERVICE HOLE COVER LH(See page 75-39)

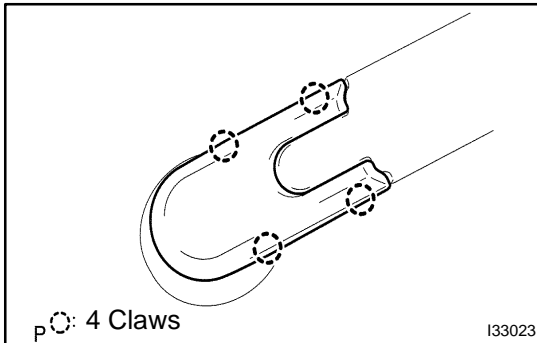


3. REMOVE REAR WIPER ARM HEAD CAP

- (a) Release the 4 claws and remove the rear wiper arm head cap.

4. REMOVE REAR WIPER ARM


- (a) Remove a nut and rear wiper arm.

5. REMOVE REAR WIPER MOTOR GROMMET

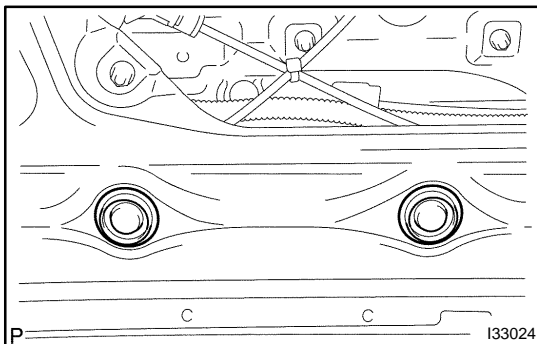


6. REMOVE REAR WIPER MOTOR ASSY

- (a) Remove the 2 grommets.

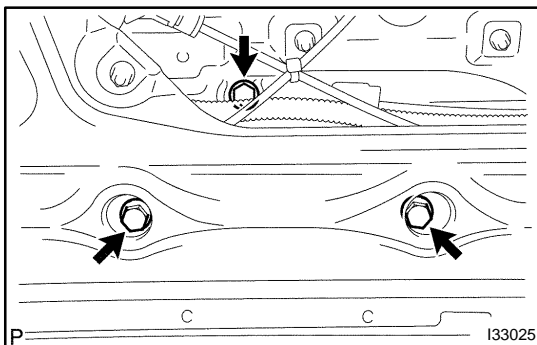


- (b) Remove the 3 bolts.

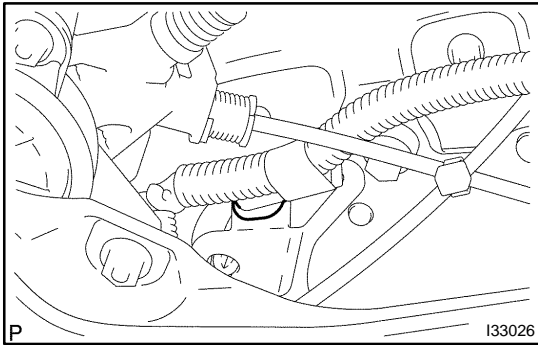

- (c) Using a clipremover, remove the clamp.
- (d) Disconnect the connector and remove the rear wiper motor assy.


7. INSTALL REAR WIPER MOTOR ASSY

- (a) Install the rear wiper motor assy with 3 bolts.
Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)
- (b) Install the clamp and connect the connector.

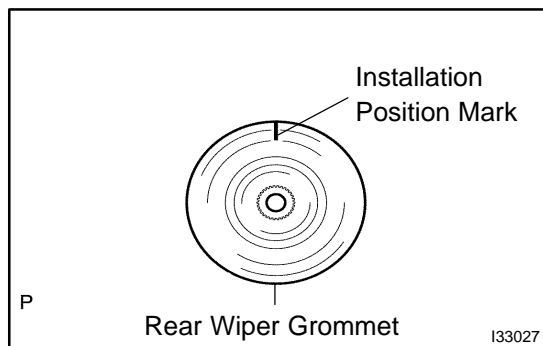


8. INSTALL REAR WIPER MOTOR GROMMET

- (a) As shown in the illustration, install the rear wiper motor grommet with its position mark upside.

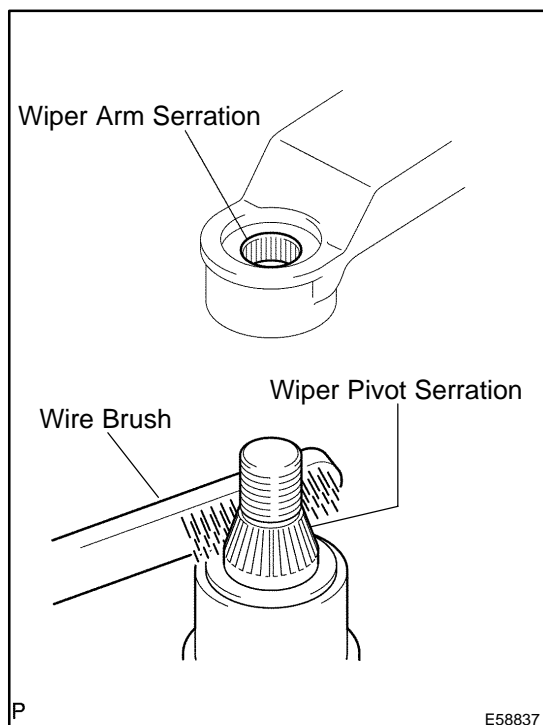

9. INSTALL REAR WIPER ARM

- (a) Scrape off the serration part of the wiper arm with a round file or equivalent.
- (b) Clean the rear wiper pivot serration with the wire brush.
- (c) Stop the rear wiper motor assy at the automatic stop position.

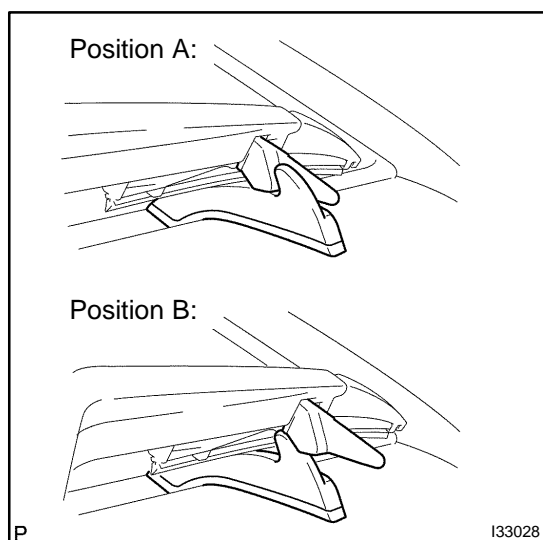

- (d) Hold the slider to the position "A" and install the arm & blade assy with the nut temporarily.
- (e) Move the slider to the position "B" and tighten the nut to install the arm & blade assy.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

HINT:

Hold down the arm hinge with hand to fasten a nut.

- (f) Set the arm & blade assy by moving it back to the rise-up position.
- (g) Operate the rear wiper while running the water or the washer fluid over the window, and check the wiping condition and that the rear wiper does not hit against the vehicle body.

10. INSTALL BACK DOOR SERVICE HOLE COVER LH(See page 75-39)