


SKID CONTROL BUZZER CIRCUIT

CIRCUIT DESCRIPTION

The skid control buzzer sounds during VSC operation.

WIRING DIAGRAM

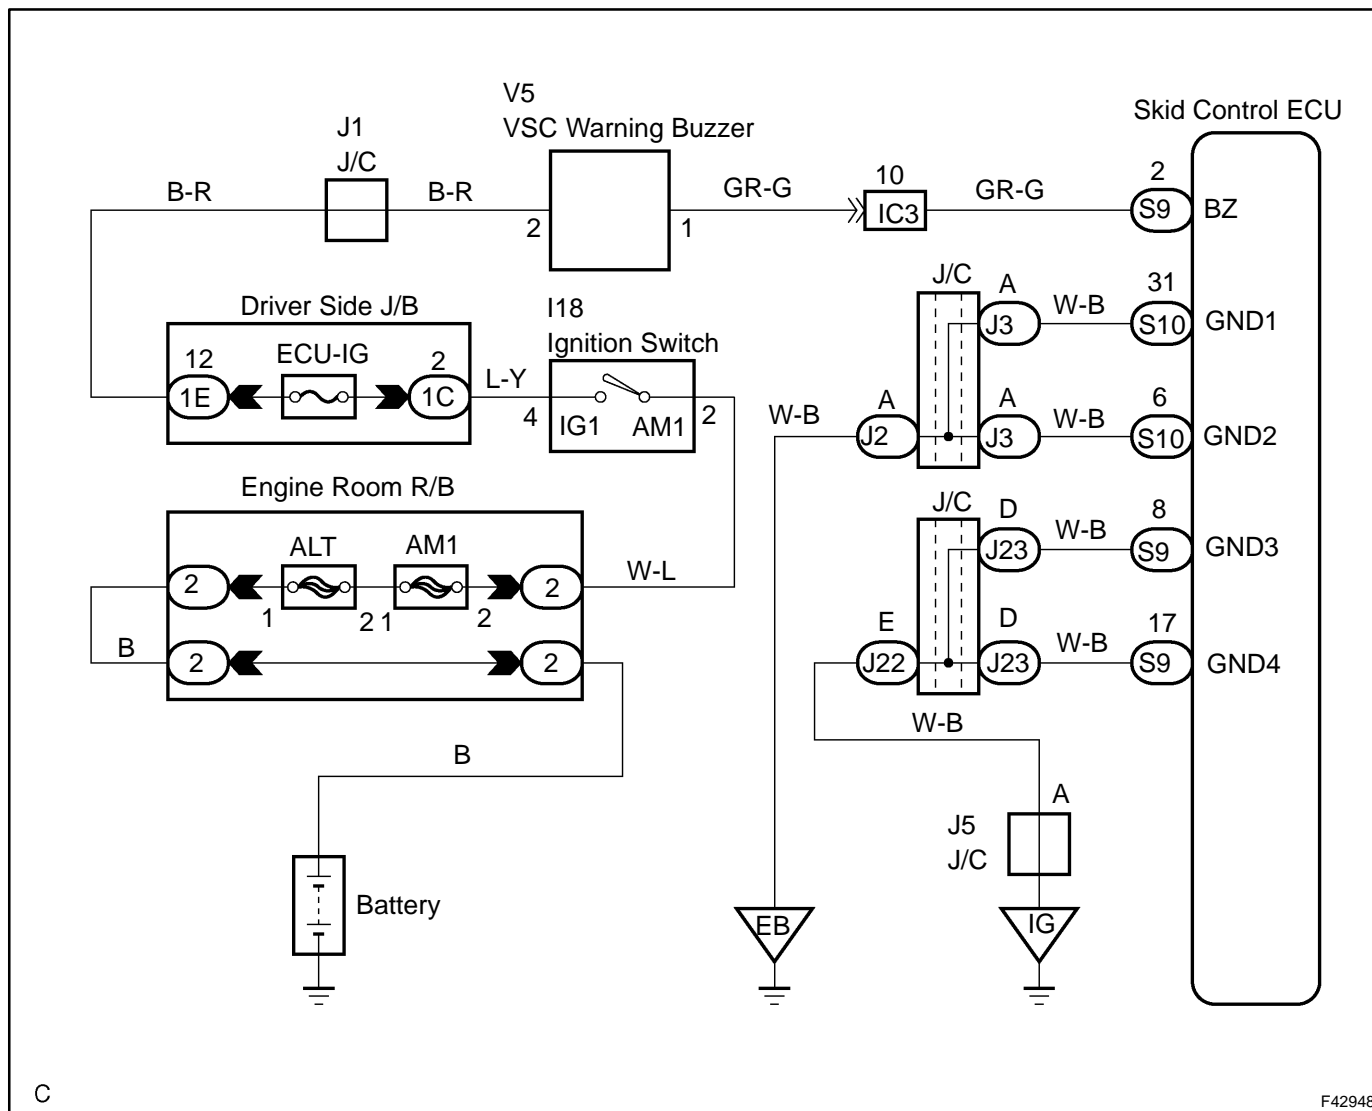

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1 PERFORM ACTIVE TEST BY SKID CONTROL BUZZER ASSY


- (a) Check that skid control buzzer sounds "ON" and "OFF" with the hand-held tester.

OK

Go to step 3

NG

2 INSPECT SKID CONTROL BUZZER ASSY

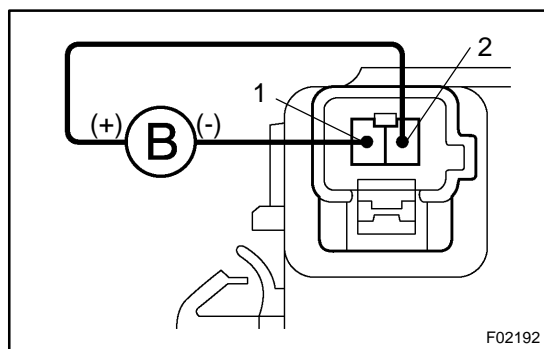

- (a) Disconnect the skid control buzzer connector.
 (b) Apply battery positive voltage to the terminals 1 and 2 of skid control buzzer connector, check that the buzzer sounds.

NG

REPLACE SKID CONTROL BUZZER ASSY

OK

3 CHECK HARNESS AND CONNECTOR(SKID CONTROL BUZZER - SKID CONTROL ECU)

- (a) Check for open and short circuit in harness and connector between terminal BZ of skid control ECU and skid control buzzer (See page 01-35).

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY