

DTC	B0130/63	SHORT IN P/T SQUIB (RH) CIRCUIT
-----	----------	---------------------------------


CIRCUIT DESCRIPTION

The P/T squib RH circuit consists of the airbag sensor assy center and the seat belt pretensioner RH. It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B0130/63 is recorded when a short is detected in the P/T squib RH circuit.

DTC No.	DTC Detecting Condition	Trouble Area
B0130/63	<ul style="list-style-type: none"> • Short in P/T squib RH circuit • P/T squib RH malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Seat belt pretensioner RH (P/T squib RH) • Airbag sensor assy center • Floor wire

WIRING DIAGRAM

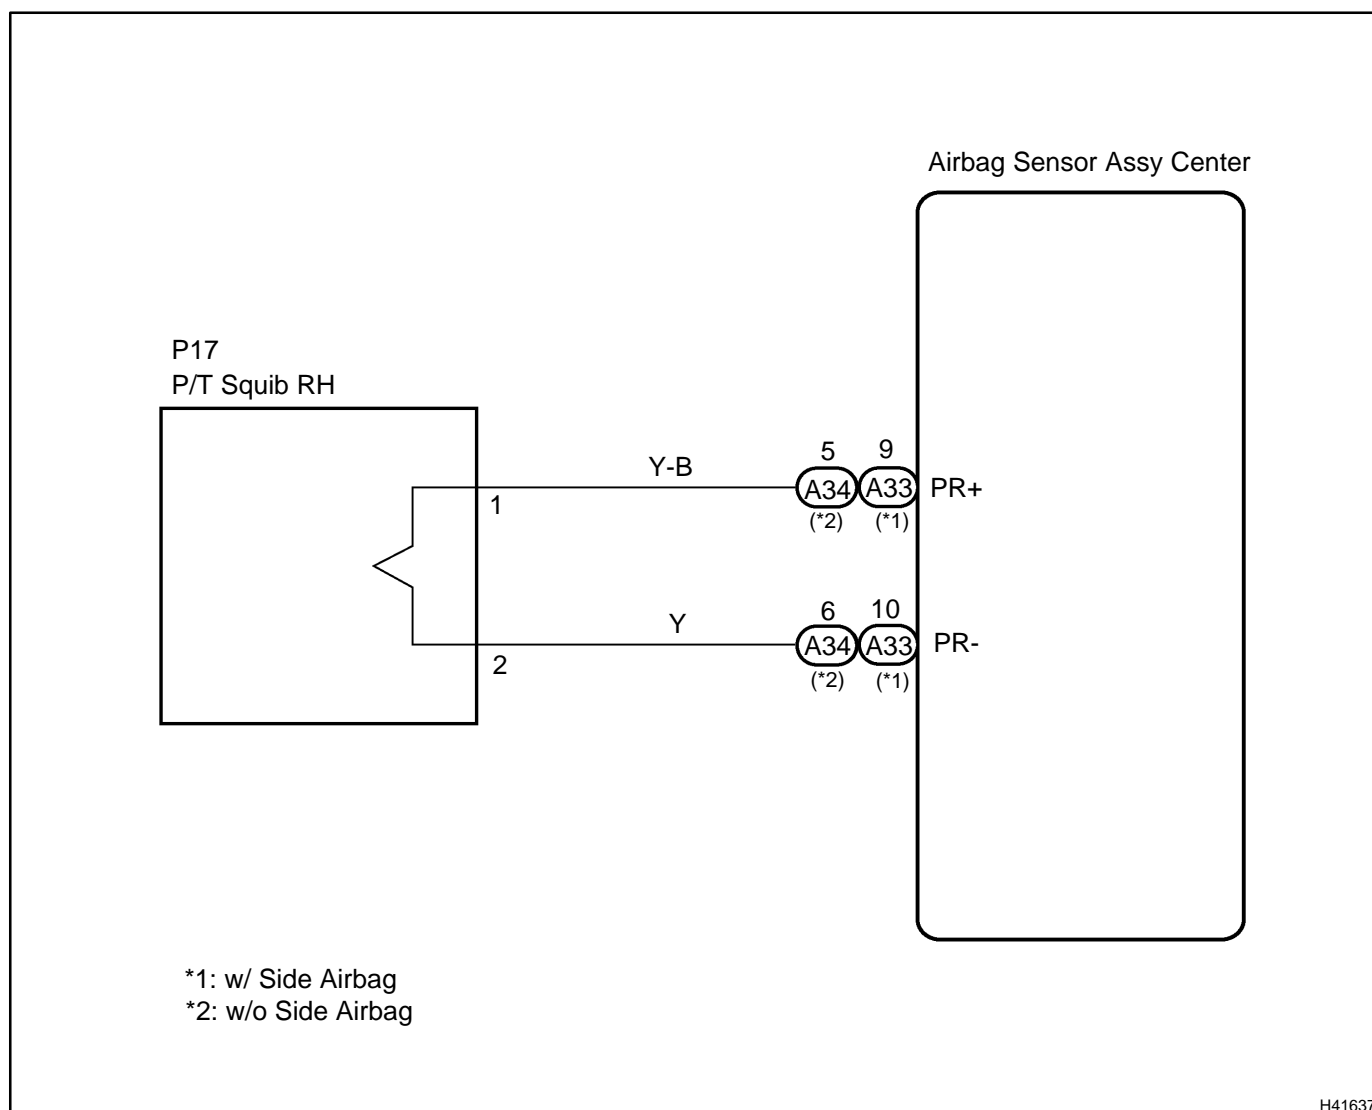

INSPECTION PROCEDURE

1 CHECK CONNECTOR

- (a) Make sure that the connector is not damaged.

OK:


The lock button is not disengaged, or the claw of the lock is not deformed or damaged.

NG

REPAIR OR REPLACE FLOOR WIRE

OK

2 CHECK FLOOR WIRE (P/T SQUIB RH CIRCUIT)

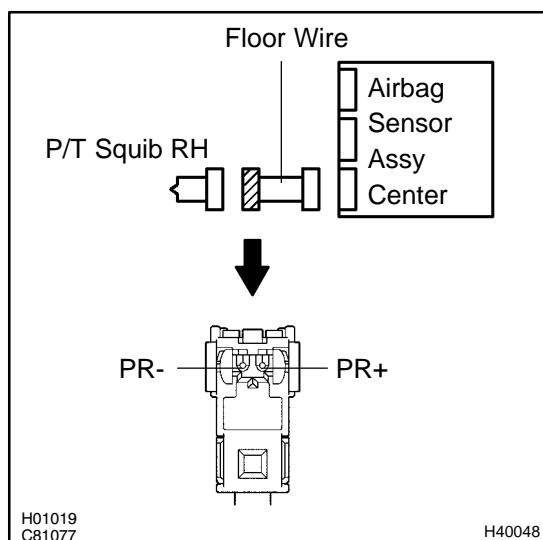

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the floor wire connectors from the airbag sensor assy center and the seat belt pretensioner RH.
- Release the airbag activation prevention mechanism built in the connector (on the airbag sensor assy center side) between the airbag sensor assy center and the seat belt pretensioner RH (See page 05-614).
- Measure the resistance between PR+ and PR- of the floor wire connector on the seat belt pretensioner RH side.

OK:

Resistance: 1 MΩ or Higher


NG

REPAIR OR REPLACE FLOOR WIRE

OK

3 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

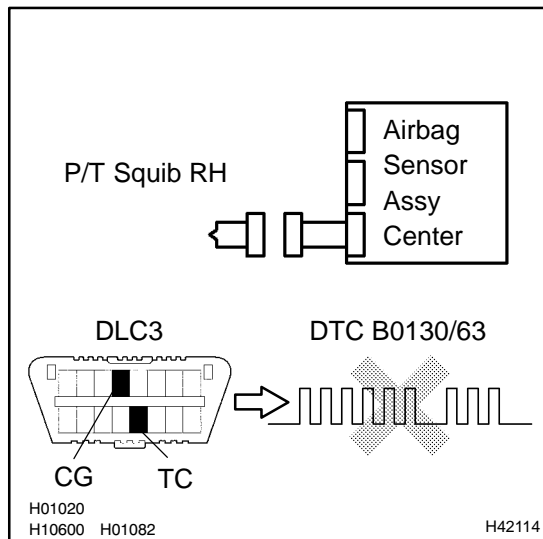

- Connect the connector to the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON and wait at least for 10 seconds.
- Clear the DTC stored in memory (See page 05-614).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC (See page 05-614).


OK:**DTC B0130/63 is not output.****HINT:**

Codes other than code B0130/63 may be output at this time, but they are not relevant to this check.

NG**REPLACE AIR BAG SENSOR ASSY CENTER****OK**

4 CHECK P/T SQUIB (RH)

SST 09843-18040

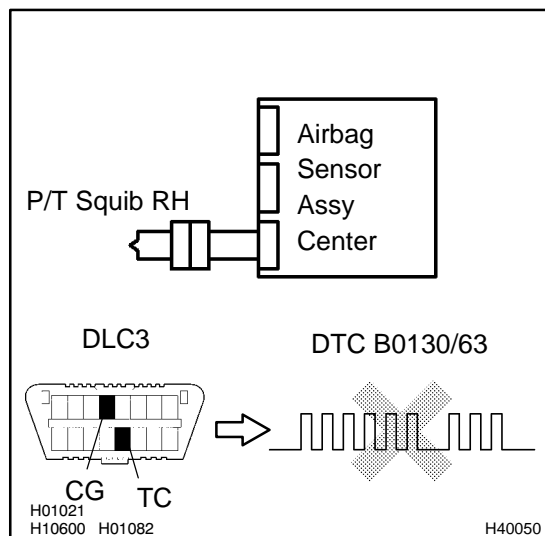

- (a) Turn the ignition switch to LOCK.
- (b) Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- (c) Connect the seat belt pretensioner RH connector.
- (d) Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- (e) Turn the ignition switch to ON, and wait at least for 10 seconds.
- (f) Clear the DTC stored in memory (See page 05-614).
- (g) Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- (h) Turn the ignition switch to ON, and wait at least for 10 seconds.
- (i) Check the DTC (See page 05-614).

OK:**DTC B0130/63 is not output.****HINT:**

Codes other than code B0130/63 may be output at this time, but they are not relevant to this check.

NG**REPLACE FRONT SEAT OUTER BELT ASSY RH****OK****USE SIMULATION METHOD TO CHECK**