


## ADJUSTMENT

### HINT:


- On the RH side, use the same procedures as on the LH side.

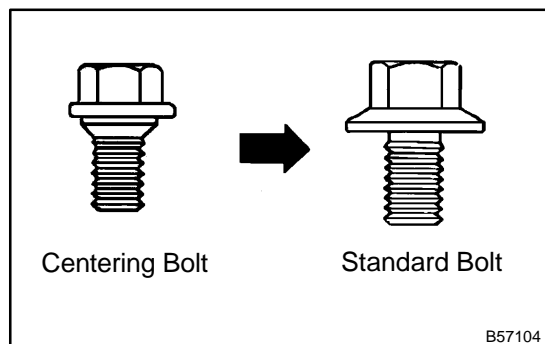

- Since the centering bolt is used as door hinge set bolts on the body side and the door side, the door can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.


### 1. INSPECT REAR DOOR PANEL SUB-ASSY LH

- (a) Check that the clearance is within the standard value.

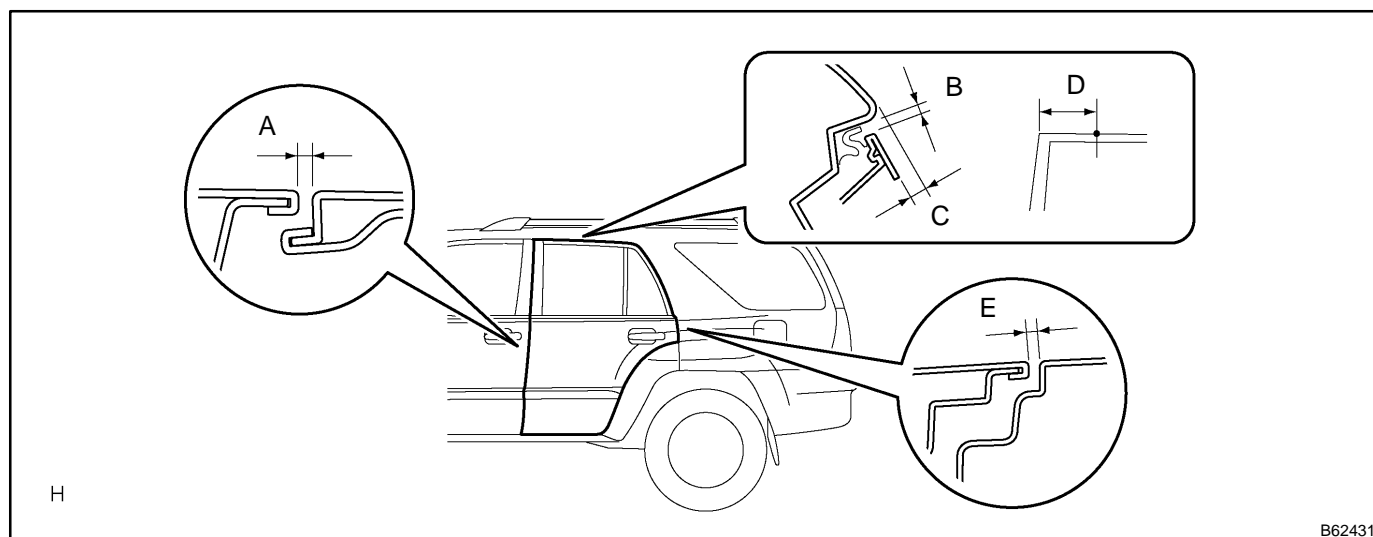

#### Standard:


A	5.0 ± 1.5 mm (0.197 ± 0.059 in.)
B	5.6 ± 1.5 mm (0.224 ± 0.059 in.)
C	8.8 ± 1.5 mm (0.343 ± 0.059 in.)
D	160 mm (6.30 in.)
E	4.5 ± 1.5 mm (0.177 ± 0.059 in.)

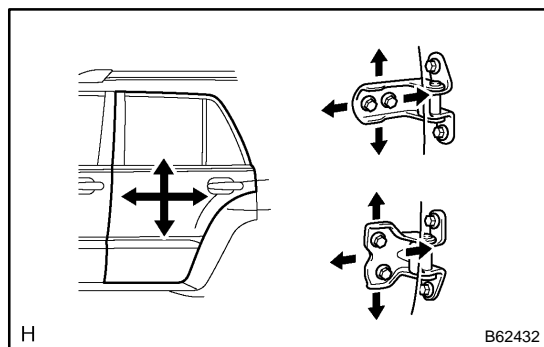

## 2. ADJUST REAR DOOR PANEL SUB-ASSY LH


- (a) Adjust the door forward/rearward and vertically by loosening the body side hinge bolts.
- (b) Tighten the body side hinge bolts after the adjustment.

**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

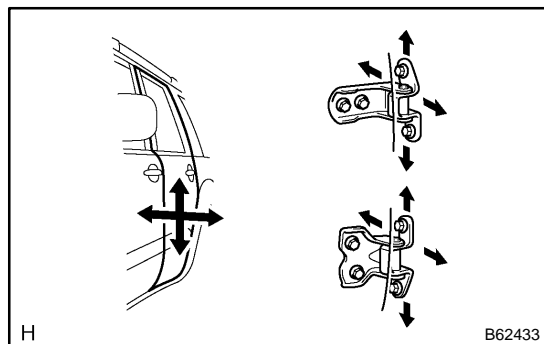

- (c) Horizontally and vertically adjust the door by loosening the door side hinge bolts.
- (d) Tighten the body side hinge bolts after the adjustment.

**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

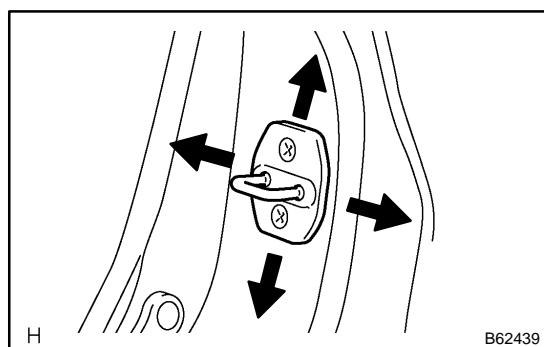

- (e) Adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.
- (f) Tighten the striker mounting screws after the adjustment.

**Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)**