

# HEIGHT CONTROL SENSOR SUB-ASSY REAR LH


## REPLACEMENT

2501G-01

HINT:

COMPONENTS: See page [25-8](#)

### 1. REMOVE REAR DISC WHEEL

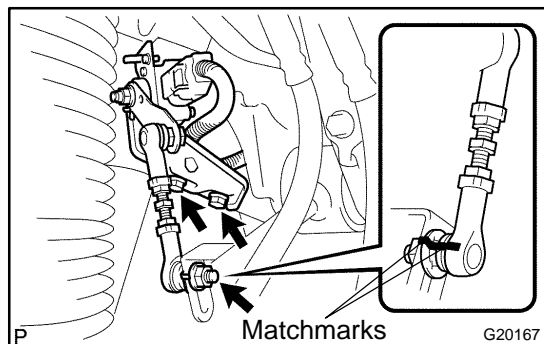

### 2. REMOVE HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

- Disconnect the connector from the height control sensor.
- Place matchmarks on the link and bracket.
- Remove the nut and disconnect the sensor link.
- Remove the 2 bolts and height control sensor.

### 3. INSTALL HEIGHT CONTROL SENSOR SUB-ASSY REAR LH

- Install the height control sensor with the 2 bolts.  
**Torque: 13 N·m (133 kgf·cm, 10 ft·lbf)**
- Align the matchmarks on the link and the bracket.
- Connect the sensor link with the nut.
- Connect the connector to the height control sensor.

**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**

### 4. INSTALL REAR DISC WHEEL

**Torque: 112 N·m (1,140 kgf·cm, 83 ft·lbf)**

### 5. MEASURE VEHICLE HEIGHT (See page [26-7](#))

### 6. ADJUST VEHICLE HEIGHT (See page [25-3](#))