

DTC	C1380/64	MALFUNCTION IN STOP LIGHT OPERATION RELAY
------------	-----------------	--

INSPECTION PROCEDURE

1	CHECK HARNESS AND CONNECTOR(STP2 INPUT CIRCUIT)
----------	--

- (a) Check for open and short circuit in harness and connector of STP2 input circuit (See page [01-35](#)).

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2	INSPECT STOP LIGHT SWITCH ASSY
----------	---------------------------------------


- (a) Check that the stop light lights up when brake pedal is depressed and turns OFF when the brake pedal is released.

NG

REPAIR OR REPLACE STOP LIGHT SWITCH ASSY OR HARNESS AND CONNECTOR

OK

3 CHECK STOP LIGHT OPERATION RELAY

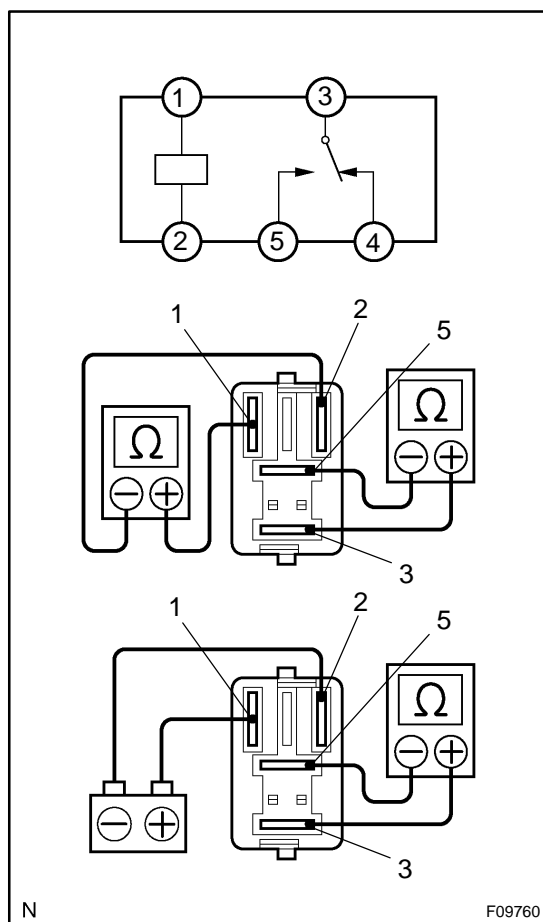

- (a) Check continuity between each terminal of stop light operation relay.

OK:

Terminal 1 and 2	Continuity (Reference value 62 Ω)
Terminal 3 and 5	Open

- (b) Apply battery voltage between terminal 1 and 2.

- (c) Check continuity between terminal 3 and 5 of stop light operation relay.

OK:

Terminal 3 and 5	Continuity
------------------	------------

NG

REPLACE STOP LIGHT OPERATION RELAY

OK

4 CHECK HARNESS AND CONNECTOR(STPO OUTPUT CIRCUIT)

- (a) Check for open and short circuit in harness and connector of STPO output circuit (See page 01-35).

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY