



WIRING DIAGRAM

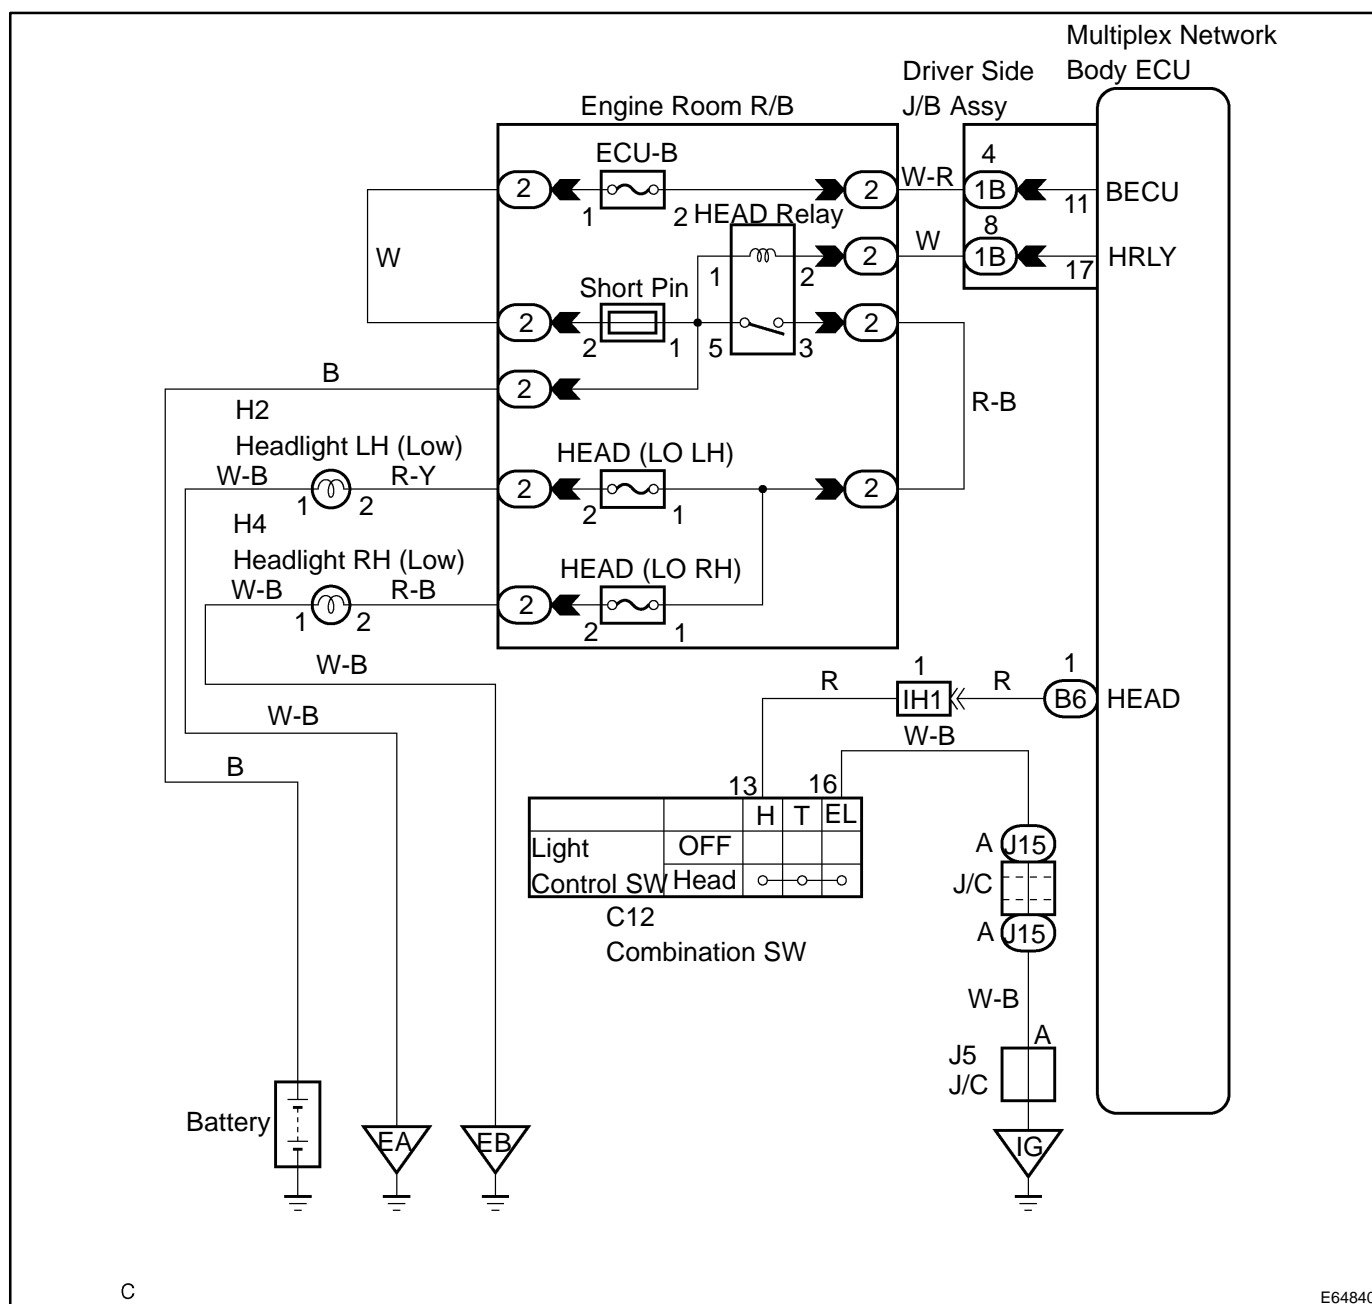

INSPECTION PROCEDURE

1 INSPECT HEADLAMP RELAY

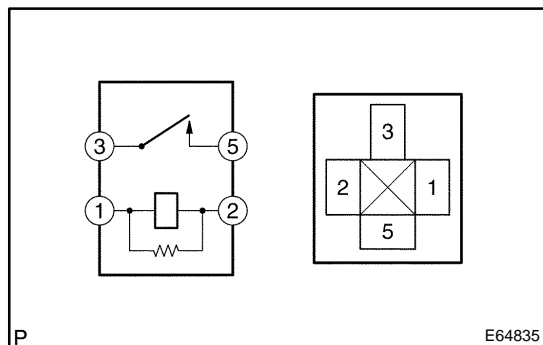


(a) Check the continuity of the headlamp relay.

Standard:

| Condition | Tester connection | Specified condition |
|-----------------------------------|-------------------|---------------------|
| Constant | 1 - 2 | Continuity |
| Constant | 3 - 5 | No continuity |
| Apply B+ between terminal 1 and 2 | 3 - 5 | Continuity |

NG**REPLACE HEADLAMP RELAY****OK**

2 INSPECT HEADLAMP DIMMER SWITCH ASSY(HEAD)

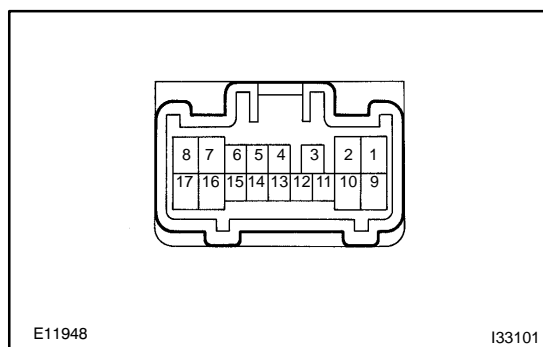

(a) Inspect light control switch continuity.

(1) Check that there is a continuity between terminals at each switch position as shown in the chart.

Standard:

| Switch operation | Tester connection | Specified condition |
|------------------|-------------------|---------------------|
| OFF | - | No continuity |
| HEAD | 13 - 16 - 14 | Continuity |

NG**REPLACE HEADLAMP DIMMER SWITCH ASSY****OK**

3 CHECK HARNESS AND CONNECTOR(BETWEEN MULTIPLEX NETWORK BODY ECU AND HEADLAMP DIMMER SWITCH ASSY)

(a) Check the continuity terminal B6-1 (HEAD) of the multiplex network body ECU and the headlamp dimmer switch assy.

Standard: There is continuity**NG****REPAIR OR REPLACE HARNESS OR CONNECTOR****OK**

CHECK AND REPLACE MULTIPLEX NETWORK BODY ECU