

DTC	B1182/19	SHORT IN D SQUIB (2ND STEP) CIRCUIT (TO GROUND)
------------	-----------------	--------------------------------------------------------

CIRCUIT DESCRIPTION

The D squib (2nd step) circuit consists of the airbag sensor assy center, the spiral cable sub-assy and the horn button assy.

It causes the SRS to deploy when the SRS deployment conditions are satisfied.

DTC B1182/19 is recorded when a ground short is detected in the D squib (2nd step) circuit.


DTC No.	DTC Detecting Condition	Trouble Area
B1182/19	<ul style="list-style-type: none"> • Short in D squib (2nd step) circuit (to ground) • D squib (2nd step) malfunction • Spiral cable sub-assy malfunction • Airbag sensor assy center malfunction 	<ul style="list-style-type: none"> • Horn button assy (D squib, 2nd step) • Spiral cable sub-assy • Airbag sensor assy center • Instrument panel wire

WIRING DIAGRAM

See page 05-780 .

INSPECTION PROCEDURE

1	CHECK D SQUIB CIRCUIT
----------	------------------------------

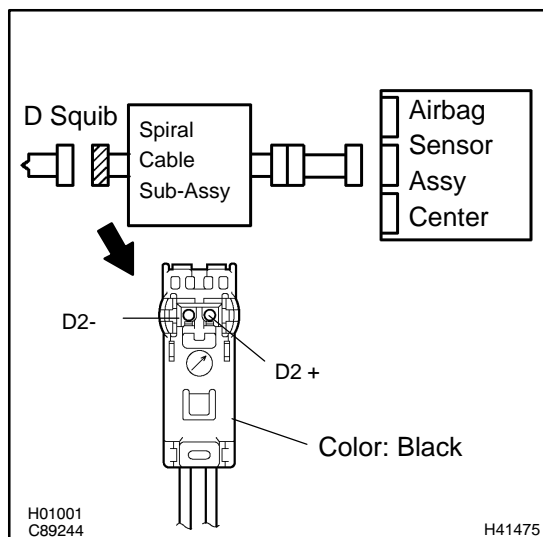

- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Disconnect the connector between the airbag sensor assy center and the horn button assy.
- Measure the resistance between the body ground and D2+ of the black connector on the horn button assy side between the horn button assy and the airbag sensor assy center.

OK:

Resistance: 1 MΩ or Higher


NG

Go to step 5

OK

2 CHECK AIR BAG SENSOR ASSY CENTER

SST 09843-18040

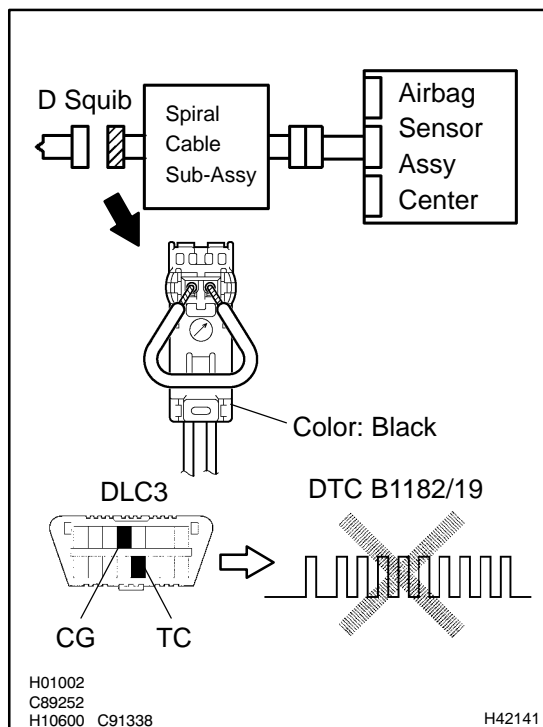


- Connect the connector to the airbag sensor assy center.
- Using a service wire, connect D2+ and D2- of the black connector on the horn button assy side between the horn button assy and the airbag sensor assy center.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Clear the DTC stored in memory (See page 05-614).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC (See page 05-614).

OK:**DTC B1182/19 is not output.****HINT:**

Codes other than code B1182/19 may be output at this time, but they are not relevant to this check.

NG**REPLACE AIR BAG SENSOR ASSY CENTER****OK**

3 CHECK D SQUIB

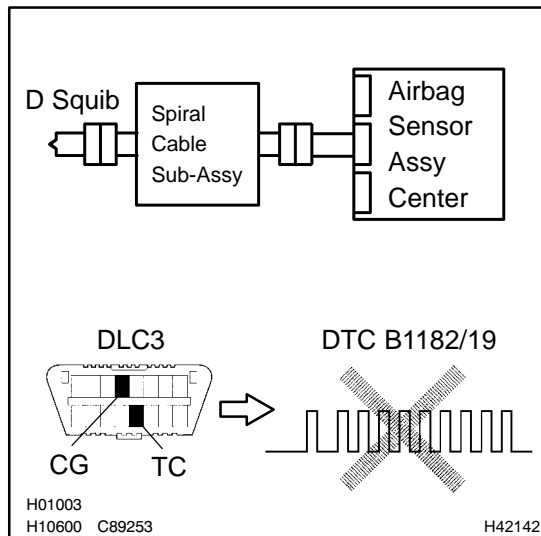

- Turn the ignition switch to LOCK.
- Disconnect the negative (-) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the horn button assy connector.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Clear the DTC stored in memory (See page 05-614).
- Turn the ignition switch to LOCK, and wait at least for 10 seconds.
- Turn the ignition switch to ON, and wait at least for 10 seconds.
- Check the DTC (See page 05-614).

OK:

DTC B1182/19 is not output.

HINT:

Codes other than code B1182/19 may be output at this time, but they are not relevant to this check.

NG

REPLACE HORN BUTTON ASSY

OK


4 USE SIMULATION METHOD TO CHECK

NG


Go to step 1

OK

REPLACE ALL SRS COMPONENTS INCLUDING WIRE HARNESS

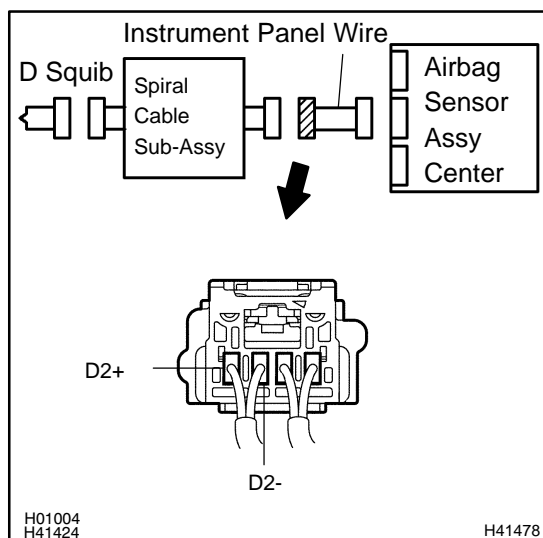5 CHECK INSTRUMENT PANEL WIRE

- (a) Disconnect the spiral cable sub-assy connectors from the instrument panel wire.
- (b) Measure the resistance between the body ground and D2+ of the instrument panel wire connector on the spiral cable sub-assy side.

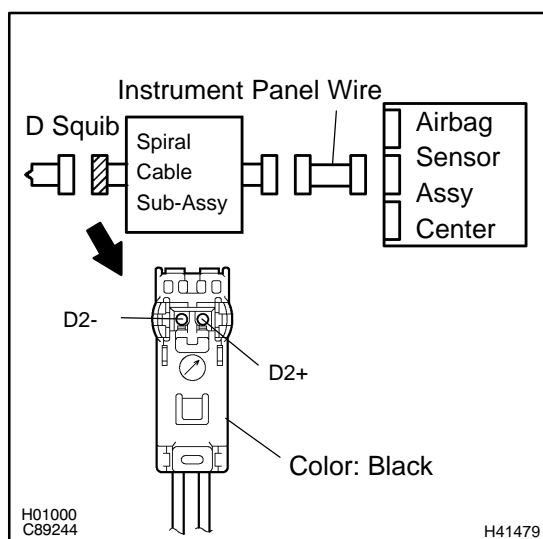OK:**Resistance: 1 MΩ or Higher****NG****REPAIR OR REPLACE INSTRUMENT PANEL WIRE****OK****6 CHECK SPIRAL CABLE SUB-ASSY**

- (a) Measure the resistance between the body ground and D2+ of the black spiral cable sub-assy connector on the horn button assy side.

OK:**Resistance: 1 MΩ or Higher****NG****REPLACE SPIRAL CABLE SUB-ASSY****OK****USE SIMULATION METHOD TO CHECK**