


INSPECTION

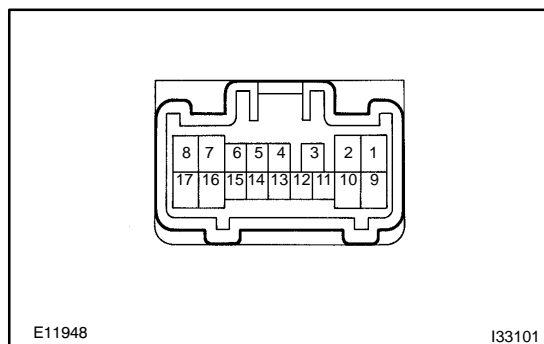

1. HEADLAMP DIMMER SWITCH ASSY

(a) Inspect the light control switch continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	-	No continuity
TAIL	14 - 16	Continuity
HEAD	13 - 16 - 14	Continuity
AUTO	16 - 12	Continuity

(b) Inspect the headlamp dimmer switch continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
FLASH	7 - 8 - 16	Continuity
LOW BEAM	16 - 17	Continuity
HI BEAM	7 - 16	Continuity

(c) Inspect the turn signal switch continuity.


- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
Right turn	2 - 3	Continuity
Neutral	-	No continuity
Left turn	1 - 2	Continuity

(d) Inspect the front fog lamp switch continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	-	No continuity
ON	10 - 11	Continuity

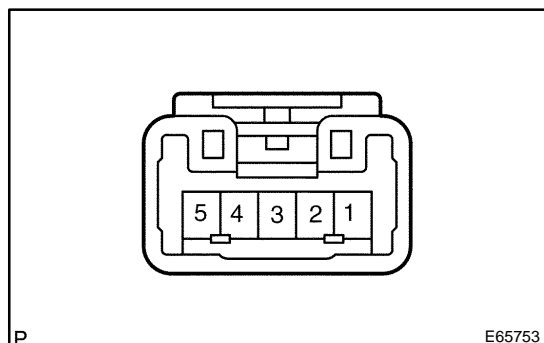


2. HAZARD WARNING SIGNAL SWITCH ASSY

(a) Check that there is continuity between terminals at each switch position as shown in the chart.

Switch operation	Tester connection	Specified condition
OFF	2 - 3	No continuity
ON	2 - 3	Continuity
Illumination circuit	4 - 5	Continuity

(b) Inspect illumination operation.


- (1) Connect the battery positive (+) lead to terminal 4 and the battery negative (-) lead to terminal 5, then check that the illumination lights up.

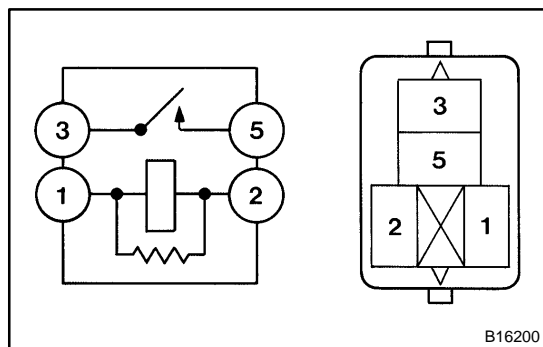

3. FOG LAMP RELAY

(a) Inspect the relay continuity.

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Constant	3 - 5	No continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

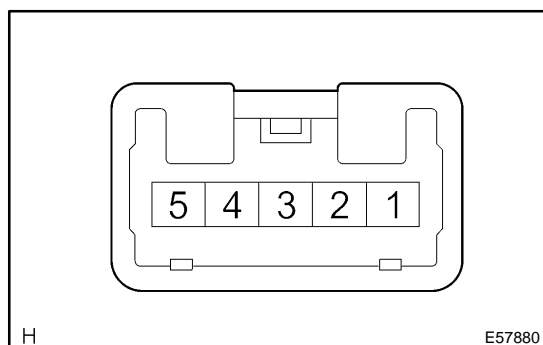

4. ROOF CONSOLE BOX ASSY


(a) Inspect the map lamp continuity.

- (1) Check that there is continuity between terminal 1 and 5 when the switch is operated.

Standard:

ON: Continuity

OFF: No continuity

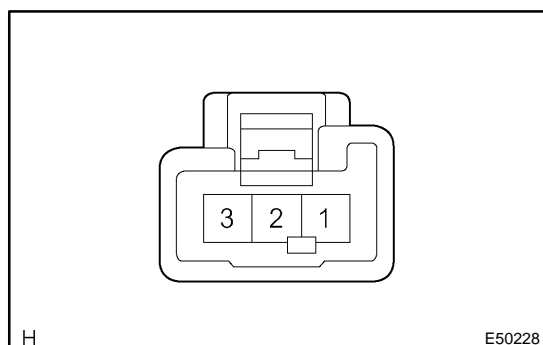


5. ROOM LAMP ASSY NO.1

(a) Inspect the room lamp assy No.1 continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Standard:

Switch operation	Tester connection	Specified condition
OFF	-	No continuity
DOOR	1 - 2	Continuity
ON	1 - 3	Continuity

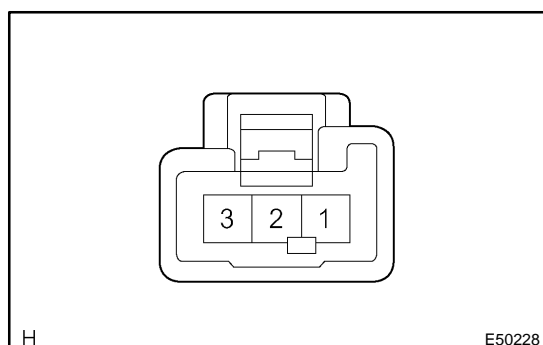

6. ROOM LAMP ASSY NO.2

(a) Inspect the room lamp assy No.2 continuity.

- (1) Check that there is continuity between terminals at each switch position as shown in the chart.

Standard:

Switch operation	Tester connection	Specified condition
OFF	-	No continuity
DOOR	1 - 2	Continuity
ON	1 - 3	Continuity

7. COURTESY LAMP ASSY

(a) Inspect the courtesy lamp assy continuity.

- (1) Check that there is continuity between terminals when the switch is operated.

Standard:

ON (When shaft is pressed): No continuity

OFF (When shaft is not pressed): Continuity

8. GLOVE BOX LAMP ASSY

- (a) Inspect the glove box lamp assy continuity.

(1) Check that there is continuity between terminals when the switch is operated.

Standard:**ON (When shaft is pressed): No continuity****OFF (When shaft is not pressed): Continuity****9. LH STEP SUB-ASSY**


- (a) Inspect the side step lamp assy.

(1) Check that there is continuity between terminals when the courtesy lamp switch is operated.

Standard:**ON: Continuity****OFF: No continuity**

- (b) Inspect the rear wheel lamp assy.


(1) Check that there is continuity between terminals when the courtesy lamp switch is operated.

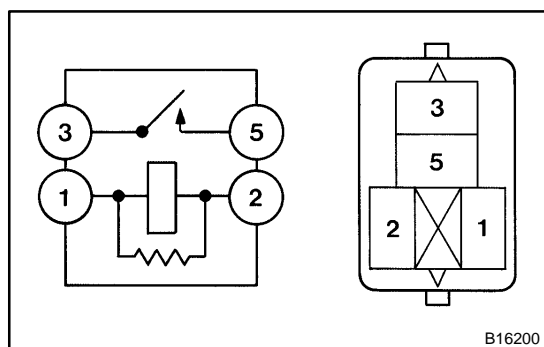Standard:**ON: Continuity****OFF: No continuity****10. TAIL LAMP RELAY**

- (a) Inspect relay continuity.

Standard:


Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Constant	3 - 5	No continuity
Apply B+ between terminal 1 and 2	3 - 5	Continuity

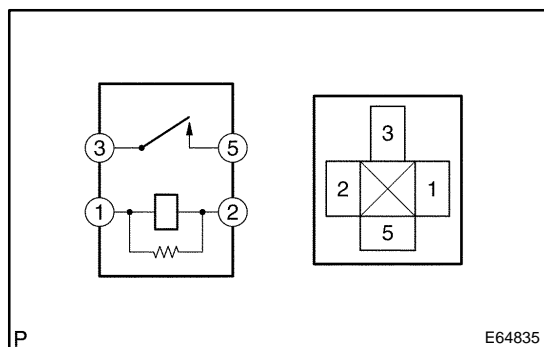**11. HEADLAMP RELAY**

- (a) Inspect relay continuity.

Standard:

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Constant	3 - 5	No continuity
Apply B+ between terminal 1 and 2	3 - 5	Continuity

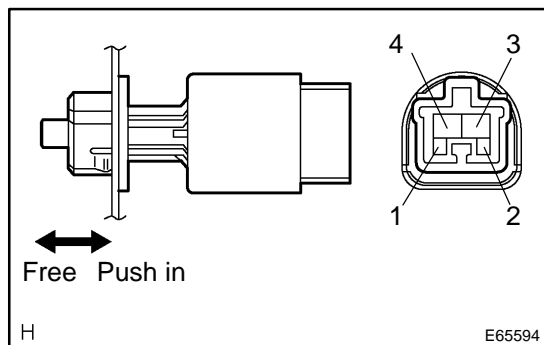**12. STOP LAMP SWITCH ASSY**

- (a) Check that the continuity between terminals at each switch position, as shown in the chart.

Standard:

Switch position	Tester connection	Specified condition
Switch pin free	1 - 2	No continuity
Switch pin free	3 - 4	Continuity
Switch pin pushed in	1 - 2	Continuity
Switch pin pushed in	3 - 4	No continuity